


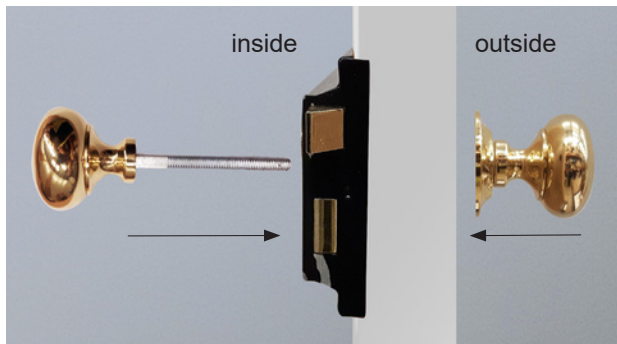


Assembly Instructions:

1. Insert the threaded spindle, attached to the knob, through the lock body.

2. Thread the **round brass retaining nut** onto the spindle by hand until it is finger-tight.

3. Once secured, rotate the brass retaining nut **90° in the reverse (loosening) direction** to allow free movement of the knob.

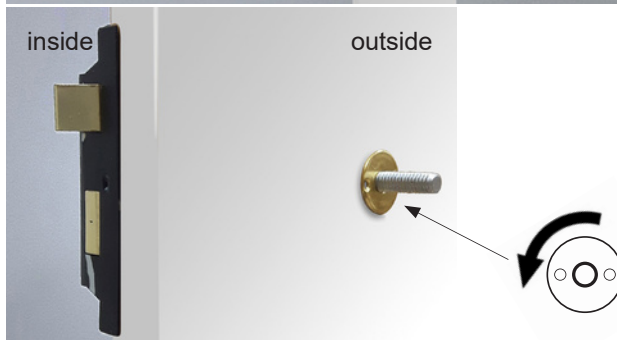

*Loosen by
1/4 turn*

