


C1165 POCKET DOOR EDGE PULL

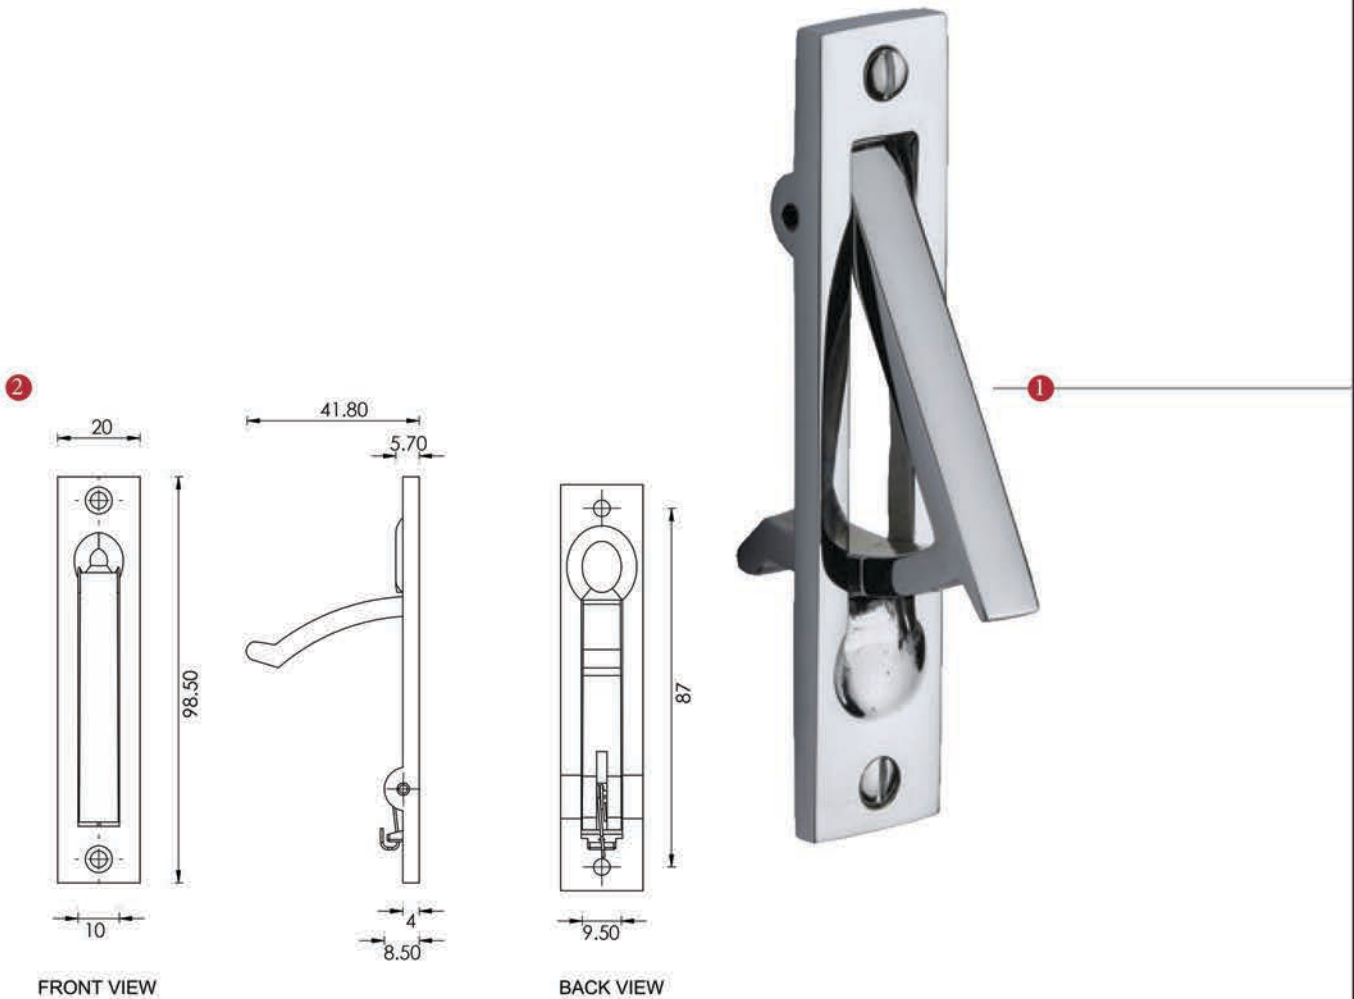

FITTING

2 Dimensions: see the outlines given above

3  19mm

- 1 Position pocket pull at a suitable height for ease of use in order to determine where to drill screw holes and where to remove required recess for pull mechanism to function.
- 2 Remove just sufficient timber to create a recess for the back of the Pocket pull and which allows the plate to lie flat onto the surface of the door.
- 3 The door may dictate where the pull can be fitted, as general guide for fitting, the centre of the pull should be positioned approx. 1000mm from the floor, and this should be a suitable height for most people.

Overview

1 Pocket Door Pull illustrated

2 General Dimensions of Pocket Door Pull

3 Supplied with: 2x 19mm scw

 M Marcus Ltd., Dudley

Product Code:

C1165

Material

Solid Brass

Available in all Heritage Brass finishes.

Sizes shown are in mm and approximate. We reserve the right to amend where necessary and without any prior notice.